


Using Your Illustrator


Tablet Controls

Once you have connected your Illustrator properly, all functions can be controlled from the tabled pad. The following outlines those controls.

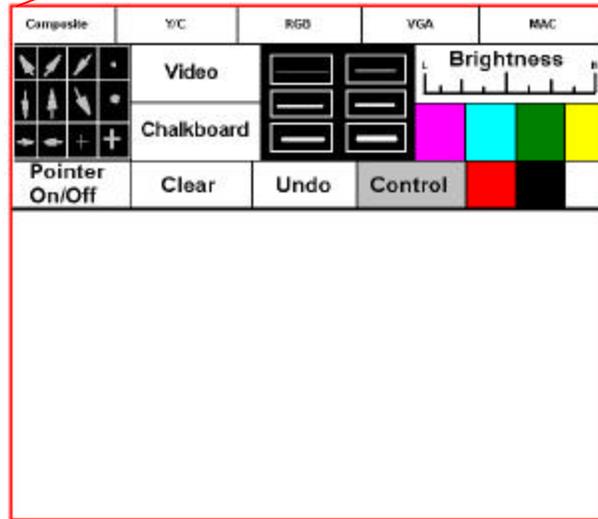

Input Sources: These icons or buttons are used to change video selection. DOAR sets this up when we configure your system and it need not be changed.

Pointers: These icons will set the cursor to a 'pointer' type. When you click the desired pointer with the tablet pen the pointer will be 'set' on the screen. You can set the pointer as many times as you want. In order to turn off the pointer you should choose the pointer on/off icon.

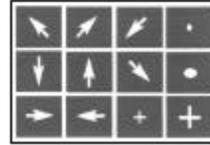

Pointer On/Off: This icon is used to turn the pointer on or off. If the pointer is turned on, you will see the pointer on the screen. If the pointer is not desired just click on the icon and it will disappear. To get the pointer back, click the Pointer On/Off icon again.


Switch: These two icons switch between the video or digital inputs and the Chalkboard. When the Video icon is pressed the video input will show on screen. If Chalkboard is chosen, then a "blue screen" will appear and you may write on the board.



Thickness: These icons are used to change the thickness of the lines created by the tablet pen. You may change the thickness while in highlight by clicking on a different area in the bar.



Brightness: This icon controls the brightness of the screen. The left of the bar is the darkest and the right is the brightest. Various degrees of brightness may be chosen along the bar.

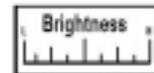

Clear: This icon clears the screen of all illustrations or text. The underlying video or chalkboard is not affected.


Undo: This icon deletes the last illustration from the screen. Selecting this multiple times deletes each prior annotation.

Control: The control icon allows multiple tablets to take or release control. When you want to 'take control' of the Illustrator from the other pads, you click on Control and start to illustrate.

Color Pad: These seven colors may be used to set the color for annotating. Clicking on the color pad will set the chosen color for pointers and freehand drawing. You may change the color by clicking on a different color on the Tablet Pad.



Pen Controls

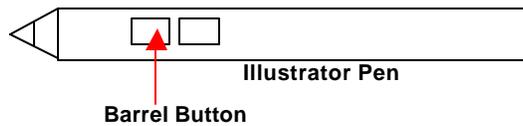

The Illustrator pen follows similar operation as a computer mouse. The pen is used to direct the pointer and drawing capabilities on the screen. By lightly placing the tip of the pen on the white drawing area of the tablet, you can freely move the cursor around the screen. By pressing down slightly, you can draw with respect to the pointer's location.

The Barrel Button is used to place pointers in stationary positions around the screen.

Selecting options on the tablet is accomplished by gently pressing the tip of the pen on the desired option.

Annotating

To Draw a Line: While looking at a monitor, gently press the tip button of the pen onto the tablet writing area and draw the desired object.

To Change Color: Gently press the tip button of the pen on the desired color box and then draw on the tablet's designated area.

To Select Pointer: Gently press the tip button of the pen on the desired pointer.

To Place a Pointer: Gently press the tip button on the writing area and press the pen's barrel button.

To Erase the Most Recent Drawing: Gently press the tip button of the pen on the *UNDO* box.

To Erase all Drawings at once: Gently press the tip button of the pen on the *CLEAR* box.